


## 5. Exploded Views and Parts List

### 5-1 Indoor Unit

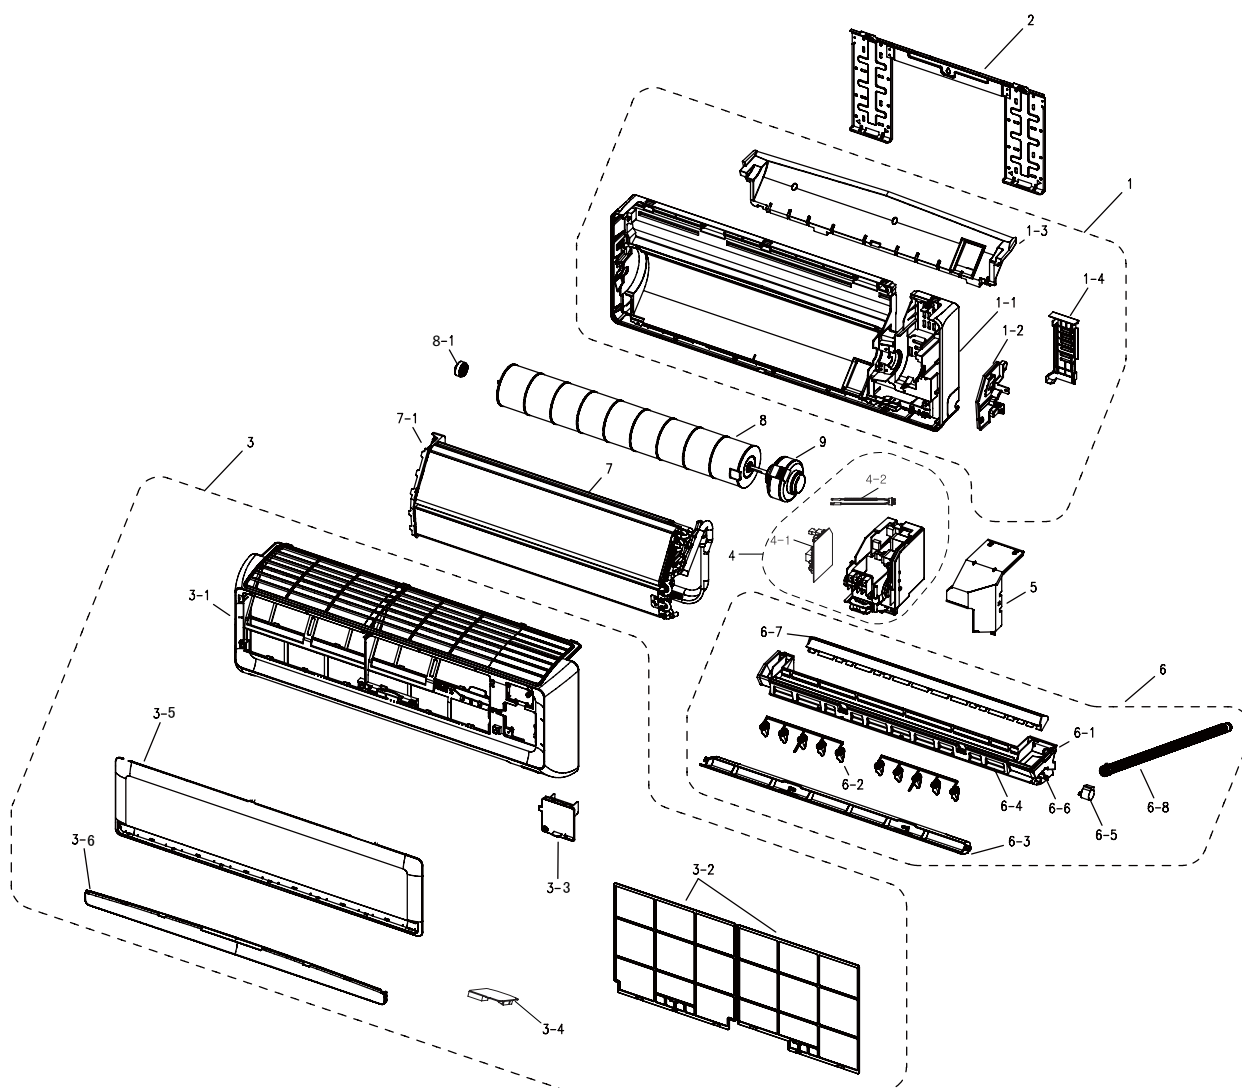

## ■ Parts List

| No. | Code No.    | Description           | Specification    | Qty          | SA/SNA |
|-----|-------------|-----------------------|------------------|--------------|--------|
|     |             |                       |                  | AQV09PWCNEUR |        |
| 1   | DB94-01921B | ASSY BACK BODY        | ASSY             | 1            | SA     |
| 1-1 | DB61-03656A | BODY BACK             | HIPS             | 1            | SA     |
| 1-2 | DB61-03651B | SUPPORT-EVAP RH       | HIPS             | 1            | SA     |
| 1-3 | DB62-05888A | SEAL-INSUL BODY REAR  | EPS(30)          | 1            | SA     |
| 1-4 | DB61-03666A | HOLDER-PIPE           | HIPS             | 1            | SA     |
| 2   | DB97-02851C | ASSY-PLATE HANGER     | SGCC-M, T0.7     | 1            | SA     |
| 3   | DB92-02280K | ASSY PANEL FRONT      | ASSY             | 1            | SA     |
| 3-1 | DB64-02561A | PANEL FRONT           | HIPS             | 1            | SA     |
| 3-2 | DB63-02760D | FILTER-PRE            | PP               | 2            | SA     |
| 3-3 | DB97-11240C | ASSY COVER TERMINAL   | ASSY             | 1            | SA     |
| 3-4 | DB90-06134B | COVER DISPLAY         | ASSY             | 1            | SA     |
| 3-5 | DB64-02553C | GRILLE-AIR INLET      | HIPS             | 1            | SA     |
| 3-6 | DB64-02550A | DECO-GRILLE           | HIPS             | 1            | SA     |
| 4   | DB93-10953A | ASSY CONTROL IN       | ASSY             | 1            | SNA    |
| 4-1 | DB93-10859G | ASSY PCB MAIN IN      | PCB              | 1            | SA     |
| 4-2 | DB95-04570B | ASSY THERMISTOR IN    | SENSOR           | 1            | SA     |
| 5   | DB90-04385A | ASSY COVER CONTROL IN | T0.5             | 1            | SA     |
| 6   | DB94-02960A | ASSY TRAY DRAIN       | ASSY             | 1            | SA     |
| 6-1 | DB94-02960A | TRAY DRAIN            | ABS              | 1            | SA     |
| 6-2 | DB61-03672A | BLADE-V               | PP               | 2            | SA     |
| 6-3 | DB66-01559A | BLADE-H               | ABS              | 1            | SA     |
| 6-4 | DB62-05892A | INSULATION-TRAY FR    | FR EPS(30)       | 1            | SA     |
| 6-5 | DB31-00371C | MOTOR STEP            | DC12V, 600gf. cm | 1            | SA     |
| 6-6 | DB69-00839A | CUSHION-TRAY RH       | EPS(30)          | 1            | SA     |
| 6-7 | DB63-02121A | TRAY-STABILIZER       | HIPS             | 1            | SA     |
| 6-8 | DB94-00458D | ASSY DRAIN-HOSE       | ASSY             | 1            | SA     |
| 7   | DB96-11359B | ASSY EVAP TOTAL       | ASSY             | 1            | SA     |
| 7-1 | DB61-03650A | HOLDER-EVAP           | HIPS             | 1            | SA     |
| 8   | DB94-01874A | ASSY-CROSS FAN        | AS +GF 30%       | 1            | SA     |
| 8-1 | DB94-00455B | ASSY RUBBER BEARING   | ASSY             | 1            | SA     |
| 9   | DB31-00531D | MOTOR FAN             | ASSY             | 1            | SA     |